


SSN-008

# Suggestion of Maintenance for Safety and Relief For the safe use of Sekigahara Product

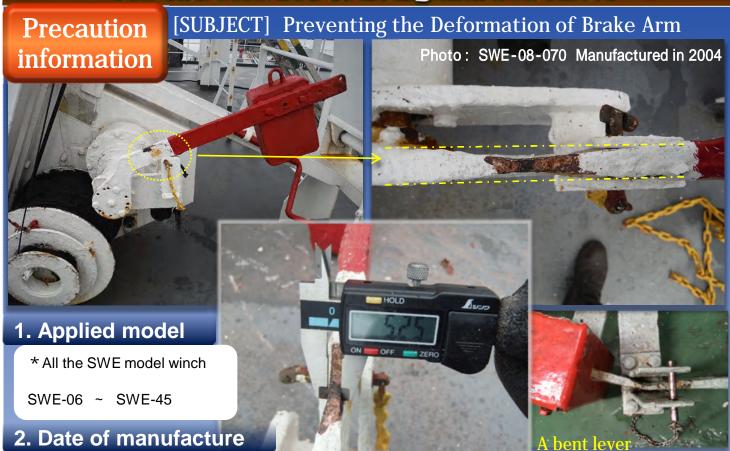

1988 ~ 2016

## 3. Outline

The brake arm (brake lever) may bend due to the unstable weight balance when the brake arm is lifted (at normal launching operation or hoisting operation by winch).

In case the arm is bent, it may be stuck to the lever guide and would not go back to suitable position for braking.

- \* Boat will keep lowering to the water without stopping. Davit may be damaged heavily if it is during sailing.
- \* Boat cannot be recovered to the stowing position.

## 4. Maintnenance and Countermeasure



In case the rust is found, remove it and carry out touch up painting.



If the arm is worn out and becomes thin, repair work is necessary. Do not thicken the lever which may interfere with the lever guide.

#### <Criteria>

If the thickness of the arm become less than 70% (8.4mm), urgent replacement of the lever is mandatory.



### SEKIGAHARA SEISAKUSHO LTD.

2067 Sekigahara-cho, Fuwa-gun, Gifu-Pref, 503-1593, Japan TEL +81-584-43-1211 FAX +81-584-43-1218 URL http://www.sekigahara.co.jp/index.html Lever is interferring with the guide because reinforcing material is too thick.

